

PETRO-BARRIER™

Maintenance procedure for Pre-Filter System

The Petro-Barrier™ has a pre-filter to trap debris from getting to the oil stopping media. As routine maintenance, this system should be cleaned or changed when restricted water flow is noticed in the system. Follow the steps below.



Unscrew and remove retaining ring.



Remove the top grate.



Remove the soiled layers of Flo-Free, GSE fabric and floss.



Inspect the cavity and clean out any dirt and debris. Re-pack with new floss and GSE fabric. Replace metal grate and retaining ring .